

SHARE SATISFACTION ALISA

USER MANUAL



Long press to turn on or off - The unit will be on standby. Short press on unit or remote to cycle through 7 modes of vibration. Complete with DC charging port & battery operated remote control.

SPECIFICATIONS

Material : Silicone + ABS
Unit size : 22.5 x 4cm
Mode : 7 vibration patterns
Charge time : 2 hours
Using time : 60 minutes on highest speed 90 minutes on lowest speed
Waterproof : IPX7 - Remote control is not waterproof

FEATURES

1. Material: Ultra-premium silicone. 100% safe, phthalate-free and latex-free
2. Waterproof
3. Rechargeable
4. 5 vibration patterns
5. Remote control - The remote can change the vibration intensity and mode whilst in use. Remote control works up to a distance of 10 meters.
6. Memory function will remember the intensity & frequency when turned off & resume at same level

SAFETY & DIRECTIONS

1. Remove toy from packaging.
2. Make sure product is 100% dry before charging.
3. Use only the charging cable included in the box.
4. To charge, remove the ball from its casing and insert DC charging cable pin head into the silicone pin port of the egg and the other end to a power source (USB).
5. Before first use, the vibrator needs to be charged between 4-6 hours. Thereafter charge for 2 hours.
7. The light will blink on and off during charging and will light up continuously when it is fully charged.
8. Wash with Share Satisfaction toy wash.
9. Apply Share Satisfaction water-based lubricant and use as desired.
10. This product has a 12-month warranty, which covers product replacement for manufacturing defects only.
11. No medical claims are implied or warranted by use of this product.
12. Warning - This product is for adults only. Do not use on swollen, inflamed or broken skin
13. Do not use charger near water.