


JOIA USER MANUAL

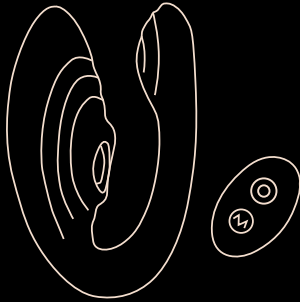

This unique vibrator boasts clitoral stimulator with 7 gentle knocking and 7 vibration patterns. It gently knocks and pulses against the clitoris on one side as the opposite slips into the vagina and stimulates the g-spot. Can be worn under clothes. Give the remote to your partner for added excitement.

SPECIFICATIONS

Material: ABS + Liquid Silicone
Size: 95 X 31 X 17mm
Mode: 7 Mode Vibration
7 Mode Knocking
Charge time: 150 min
Using time: 30 min
Remote control distance: 8-15m
Waterproof: 100% waterproof

FEATURES

1. Dual stimulation – intensify pleasure with clitoral suction and internal vibration.
2. Eco-friendly USB rechargeable - simply insert the charger into the toy and/or remote where indicated by DC Ⓞ
3. Made from liquid silicone – soft, safe and reliable.
4. Waterproof - can be used in the shower, bath or hot tub. The remote control is not waterproof – keep away from moisture.

SAFETY & DIRECTIONS

1. Remove toy from packaging.
2. Charge the toy. The light will blink on and off during charging and will light up continuously when unit is fully charged.
3. Wash with Share Satisfaction toy wash.
4. Apply Share Satisfaction water-based lubricant.
5. Turn on your 'JOIA' sex toy by holding the Ⓞ button on the toy.
6. Gently insert the smaller G-spot stimulator into the vagina, resting the external clitoral stimulator on the clitoris.
7. Short presses of the Ⓞ on the unit to cycle through knocking and vibrating functions.
8. To change the mode of vibration, via the remote simply press the mode Ⓞ button.
9. To change knocking functions via the remote, simply press Ⓞ
10. Warning – this product is for adults only. Do not use on swollen, inflamed or broken skin. No medical claims are warranted or implied by the use of this product.
10. Do not charge near water.



SHARESATISFACTION.COM