

## MARLEY USER MANUAL



This powerful vibrator boasts 10 vibration modes and intensities. The wand will stimulate your G Spot as the outer arm will send delicious vibrations through your clitoris. It is fully waterproof so you can use it while taking a shower or relaxing in the bath tub.

## SPECIFICATIONS

Material: ABS + Liquid Silicone  
Size: 38mm x 200mm  
Mode: 10 Mode Vibration  
Charge time: 120 mins  
Using time: 75 mins  
Waterproof: IPX7100% waterproof

## FEATURES

1. Dual stimulation - intensify pleasure with clitoral and internal vibration.
2. Eco-friendly USB rechargeable - simply insert the charger into the toy and/or remote where indicated by DC Ⓞ
3. Made from liquid silicone - soft, safe and reliable.
4. Waterproof - can be used in the shower, bath or hot tub.

## SAFETY & DIRECTIONS

1. Remove toy from packaging.
2. Charge the toy. The light will blink on and off during charging and will light up continuously when unit is fully charged.
3. Wash with Share Satisfaction toy wash.
4. Apply Share Satisfaction water-based lubricant.
5. Turn on your 'MARLEY' sex toy by pressing the button  on the toy.
6. Gently insert the G-spot stimulator into the vagina, resting the external clitoral stimulator on the clitoris.
7. To change the mode of vibration, simply press the mode  button on the toy.
8. This product has a 12 month warranty, which covers product replacement for manufacturing defects only.
9. This product is for adults only. No medical claims are implied or warranted by use of this product.
10. Do not charge near water.



SHARESATISFACTION.COM