

 


## ODIN USER MANUAL



- Long press  to turn on or off
- Short press  to cycle through 9 modes of vibration
- DC charging port  - on the front of the unit

 
## SPECIFICATIONS

Size: 10.7 x 51.1 x 33cm  
Mode: 9 vibration patterns  
Material: ABS + Silicone  
Charging Time : 40 min  
User time: 60 min  
Waterproof: IPX6

## FEATURES

1. Material: Ultra-premium silicone. 100% safe, phthalate-free and latex-free
2. Dual motor with 9 vibration patterns
3. Waterproof
4. Rechargeable
5. Use solo or together

## SAFETY & DIRECTIONS

1. Remove toy from packaging.
2. Before first use, the vibrator needs to be charged for 4-6 hours. Thereafter, charge time is 40 minutes.
3. Charge the toy. Make sure the product is 100% dry before charging. Use only the charging cable included in the box.
4. To charge, insert DC charging cable pin head into the pin port on the front of the unit  and the other end to a power source (USB).
5. The light will blink on and off during charging and will light up continuously when unit is fully charged.
6. Wash with Share Satisfaction toy wash.
7. Apply Share Satisfaction water-based lubricant.
8. This product has a 12 month warranty, which covers product replacement for manufacturing defects only.
9. Warning - this product is for adults only. Do not use on swollen, inflamed or broken skin. No medical claims are warranted or implied by the use of this product.
10. Do not charge near water.



SHARESATISFACTION.COM